



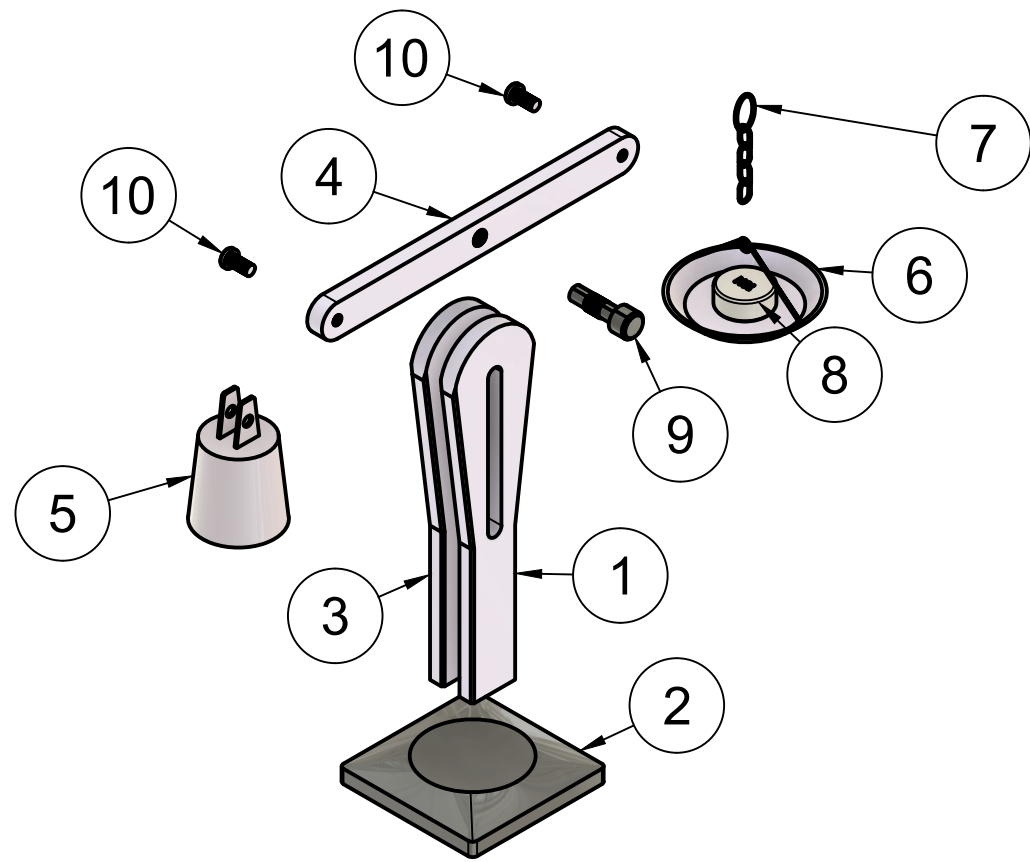


EXPLODED VIEW

10	2	Screw	Aluminum
9	1	Height adjuster screw	Aluminum
8	1	Weight	Stainless Steel
7	1	Chain	Stainless Steel
6	1	Plate	Aluminum
5	1	Lamp	----
4	1	Arm	Aluminum
3	1	Arm stand	Aluminum
2	1	Base	Aluminum
1	1	Arm stand	Aluminum
Item	Qty	Part Name	Material
Parts List			


Note: Lamp material is aluminium for the shade and glass for the bulb.

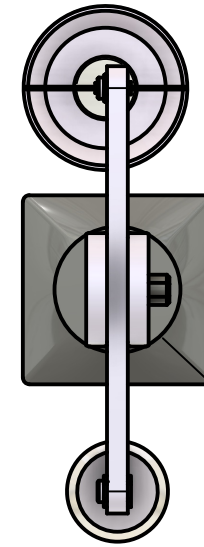


TOP VIEW

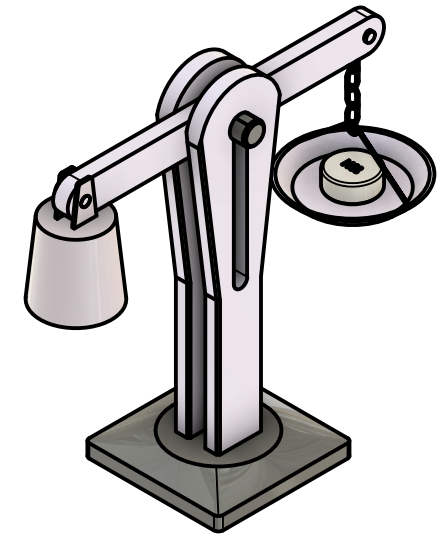

ISOMETRIC VIEW

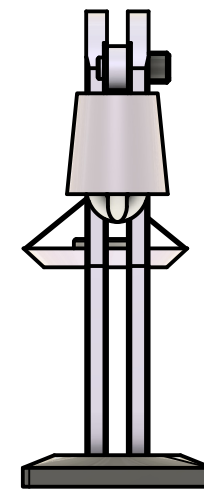


FRONT VIEW

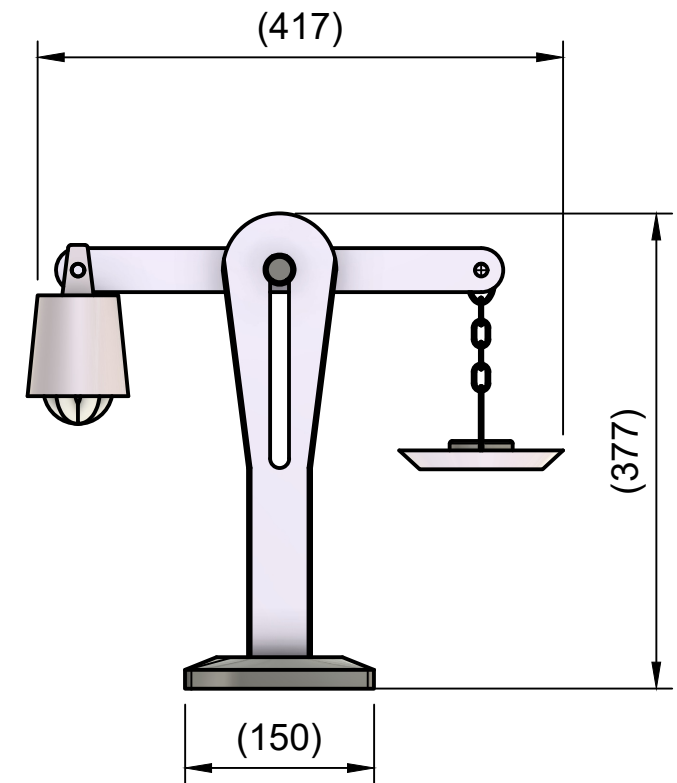


RIGHT VIEW


 Waipapa Taumata Rau University of Auckland TEMPLATE ENGEN 115 2025	MATERIAL Various materials		3RD ANGLE PROJECTION 		SCALE 1:6
	DRAWN BY Martin Jin		TITLE Balance lamp assembly		
	APPROVED BY				
	DRAWN DATE 24/08/2025		SHEET SIZE A3	REV.	QUANTITY 1

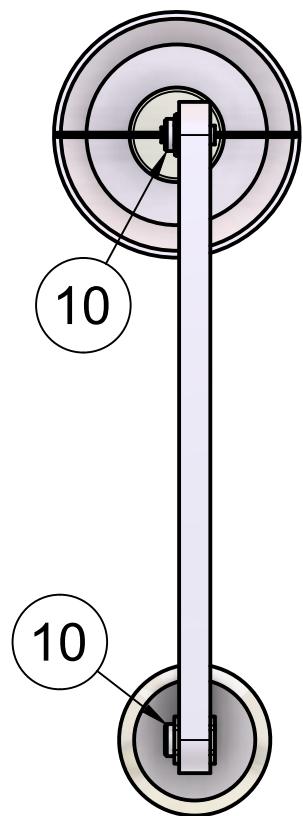


TOP VIEW

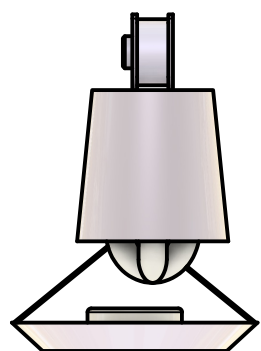

FRONT VIEW

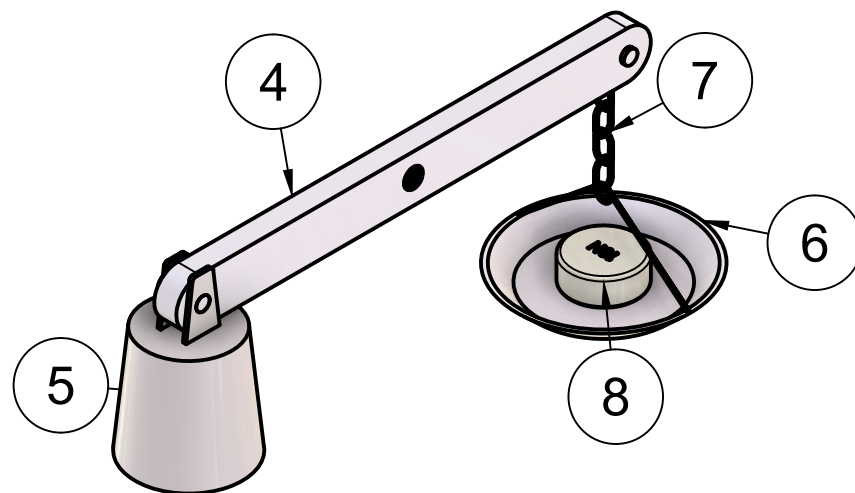

ISOMETRIC VIEW

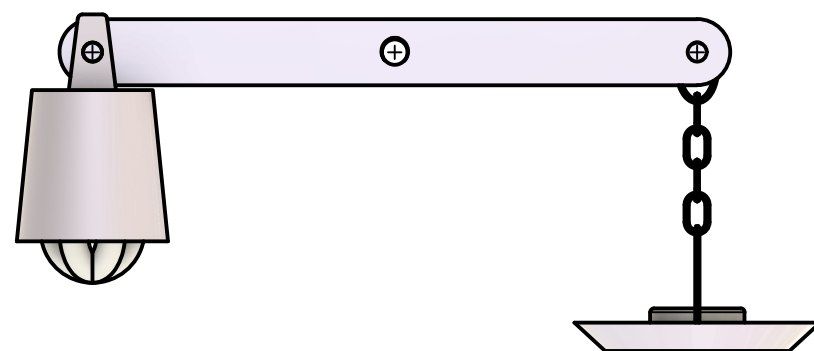

RIGHT VIEW

Arm assembly instructions

For how to connect the lamp and plate to the arm. Note the chain should be connected to the plate hook/ring when manufactured so there are no instructions for connecting them.

1. Insert the arm (4) in between the two lamp (5) screw holes.
2. Line up the lamp (5) screw holes with one of the arm (4) screw holes, rotate lamp to desired angle and fasten the screw (10) with a wrench after inserting it through both screw holes to connect the two.
3. Fasten the other screw (10) at the other screw hole with a wrench.
4. Hang the chain (7) which is connected to the plate (6) in the space between the screw (10) cap and the arm (4) on the screw that's not connecting the lamp.
5. Place the weight (8) on the plate (6).

Note:

- The counter weight is actually ornamental, as the the arm is held by friction with the height adjuster screw. See next page for more details.



TEMPLATE

ENGEN 115 2025

Waipapa
Taumata Rau
University
of Auckland

MATERIAL

Various materials

DRAWN BY

Martin Jin

APPROVED BY

DRAWN DATE

24/08/2025

SHEET SIZE

A3

3RD ANGLE
PROJECTION



SCALE

1:4

TITLE

Arm sub assembly


REV.

QUANTITY


1

SHEET


2/11

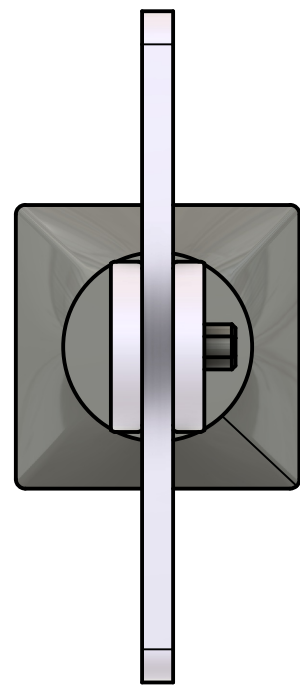


TOP VIEW

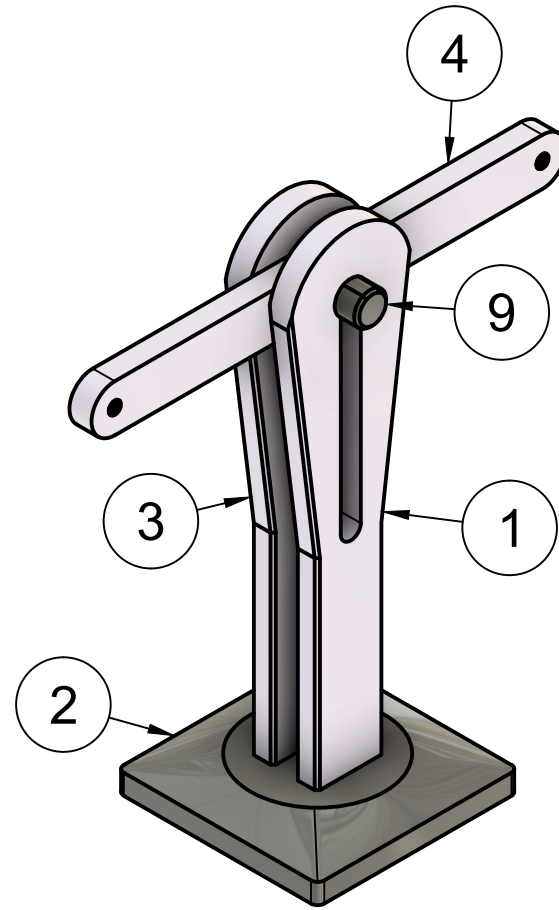

ISOMETRIC VIEW

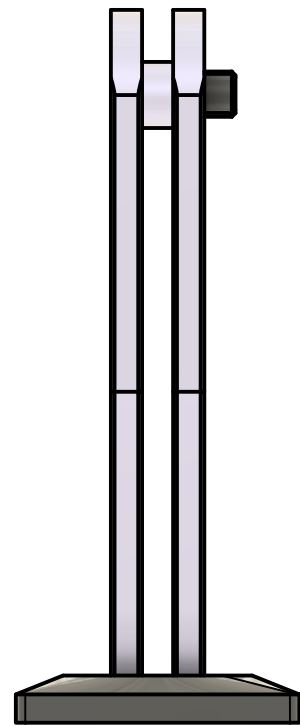

FRONT VIEW

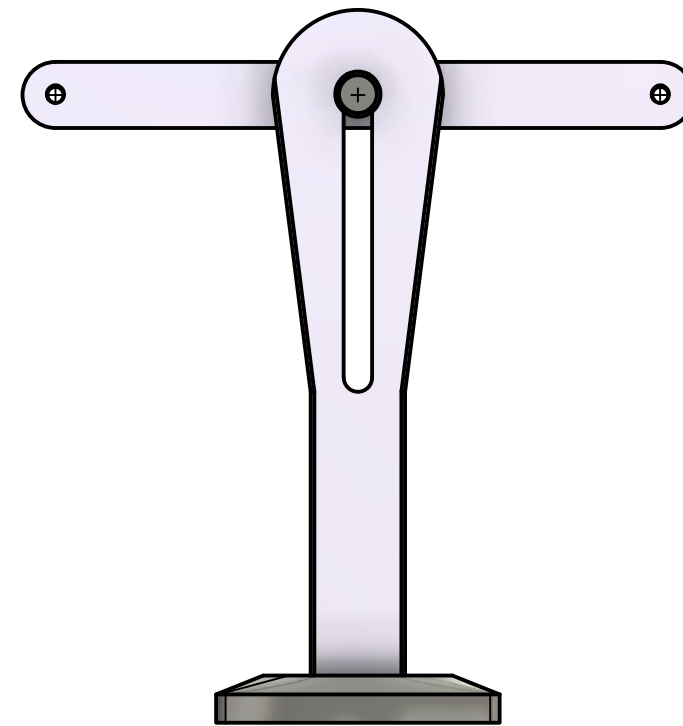

RIGHT VIEW

Stand assembly instructions

For how to connect the arm to the stands. Note the arms should be welded to the base when manufactured so there are no instructions for connecting them. See full assembly cad model for more details on where they should be welded.

1. Insert the lamp arm between the two stands. Line up the arm (4) screw hole with the slots of the stands (1) & (3) at a desired height.
2. Fasten the height adjuster screw (9) after inserting it into the slot of the arm (4) and the arm (4) screw hole by hand.
3. Height can be readjusted by repeating the process at any other point on the slot of the arm (4), friction holds the arm in place.
4. Angle of arm (4) can also be adjusted in the same way.

 Waipapa Taumata Rau University of Auckland TEMPLATE ENGGEN 115 2025	MATERIAL Aluminium		3RD ANGLE PROJECTION 		SCALE 1:4
	DRAWN BY Martin Jin		TITLE Stand sub assembly		
	APPROVED BY				
	DRAWN DATE 24/08/2025	SHEET SIZE A3	REV.	QUANTITY 1	SHEET 3/11

